
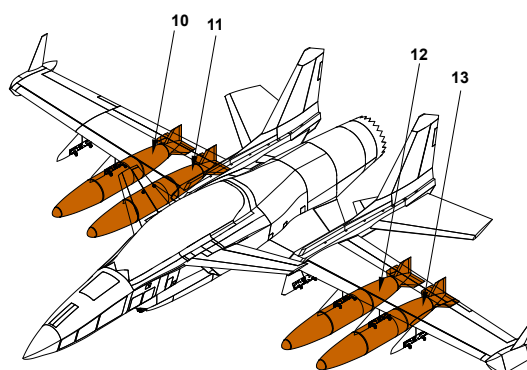


SM-28S/T FUEL QUANTITIES & TANK ARRANGEMENT

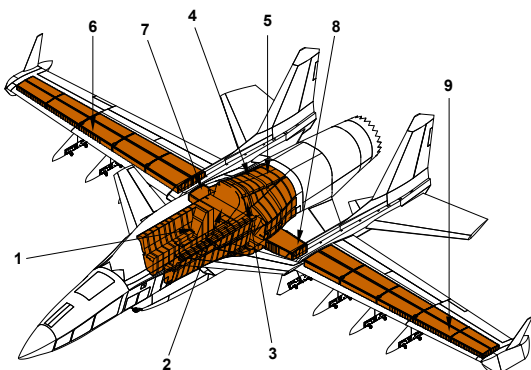

INTERNAL FUEL TANKS		USABLE FUEL			
TANK #	TANK LOCATION	US GALLONS	JP-4 POUNDS	JP-5 POUNDS	JP-8 POUNDS
1	Fuselage: 271101-T	190	1,234	1,291	1,272
2	Fuselage: 271201-T	106	691	723	712
3	Fuselage: 271301-T	58	380	397	392
4	Fuselage: 271401-T	211	1,371	1,434	1,413
5	Fuselage: 271501-T	111	722	756	745
6	Wing: 6902-R	16	102	107	105
7	Wing: 6906 & 6908-R	108	699	732	721
8	Wing: 6902-L	16	102	107	105
9	Wing: 6906 & 6908-L	108	699	732	721
TOTAL INTERNAL FUEL		923	6,000	6,277	6,185

EXPENDABLE/EXTERNAL TANKS		USABLE FUEL			
TANK #	TANK LOCATION	US GALLONS	JP-4 POUNDS	JP-5 POUNDS	JP-8 POUNDS
10	Right External: 401315	150	975	1,020	1,005
11	Right External: 401315	150	975	1,020	1,005
12	Left External: 401315	150	975	1,020	1,005
13	Left External: 401315	150	975	1,020	1,005
TOTAL EXPENDABLE/EXTERNAL		600	3,900	4,080	4,020

MAXIMUM AIRCRAFT FUEL: All TANKS	1,523	9,900	10,357	10,205
---	--------------	--------------	---------------	---------------

NOTES:

- 1) Fuel weights are based on JP-4 at 6.5 lbs/gal, JP-5 at 6.8 lbs/gal and JP-8 at 6.7 lbs/gal and an atmospheric temperature of 59°F.
 2) Fuel quantities, in pounds, are rounded to the nearest pound. The actual gallons times 6.5, 6.7 or 6.8 will not necessarily agree with the pounds column.